



ATTENTION

If any components of this unit are broken,
do not operate properly, or for product returns,
please contact Pragotrade LLC at

1-800-814-4895

Outside the U.S. call 440-638-3131.

For the online catalog, log onto www.westonsupply.com.

Exclusively imported by Pragotrade LLC Strongsville, Ohio
www.pragotrade.com

Roma[™]
by **WESTON**


APPLE & FRUIT CRUSHER

HOPPER

Model No. 05-0301



*Apple & Fruit Crusher
Sold Separately*

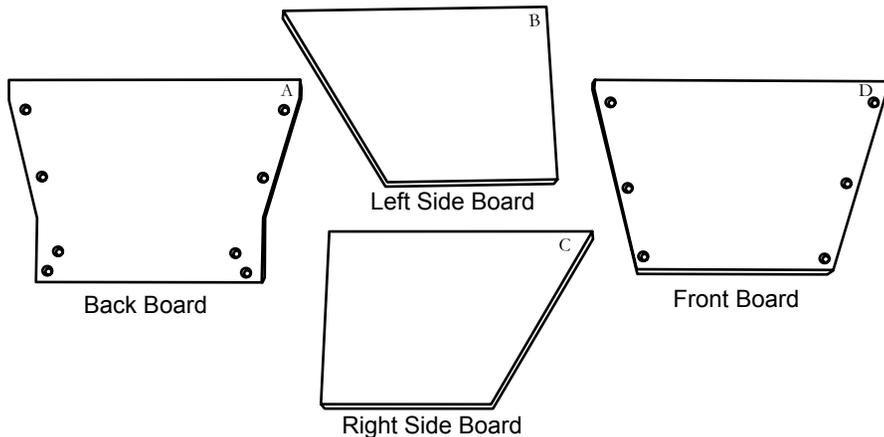


**TOOLS
NEEDED TO
ASSEMBLE**

Phillips Head Screwdriver

10mm Wrench

8mm Wrench

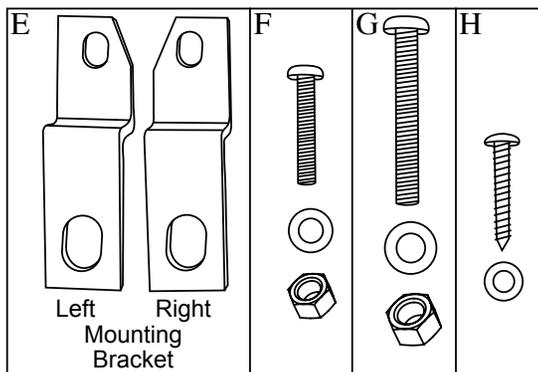

COMPONENT LIST

DIAGRAM LETTER	PART DESCRIPTION
A	Back Board
B	Left Side Board
C	Right Side Board
D	Front Board
E	Left Mounting Bracket, Right Mounting Bracket
F	1" Machine Screw (2), Flat Washer (2), Hex Locking Nut (2)
G	1½" Machine Screws (2), Flat Washer (4), Hex Locking Nut (2)
H	Wood Screw (12), Flat Washer (12)

If any components of this unit are broken or the unit does not operate properly, call Pragotrade LLC Toll Free at

1-800-814-4895

Monday thru Friday 8:00am-5:00pm EST.
Outside the U.S. call 440-638-3131

WARRANTY INFORMATION
SAVE THIS WARRANTY INFORMATION FOR YOUR RECORDS!

Pragotrade LLC warrants to the ORIGINAL RETAIL PURCHASER of this product that if operated in accordance with the printed instruction accompanying it, then for a period of 1 year from the date of purchase, the product shall be free from defects in material and workmanship.

The Warranty Card, along with a copy of the original receipt, must be received by Pragotrade LLC within 30 days from purchase date for the warranty to apply. Failure to send the completely filled out Warranty Card, along with a copy of the original receipt, will void the warranty.

The product must be delivered to or shipped freight prepaid to Pragotrade LLC for warranty services, in either its original packaging or similar packaging affording an equal degree of protection. Damage due to shipping is not the responsibility of the company. Pragotrade LLC charges a \$35.00 per hour bench charge. NOTE: No repairs will be started without the authorization of the customer. The return shipping cost to the customer will be added to the repair invoice.

Pragotrade LLC will repair (or at its discretion, replace) the product free of charge, if in the judgment of the company, it has been proven to be defective as to seller's labor and material, within the warranty period.

New or rebuilt replacements for factory defective parts will be supplied for one (1) year from the date of purchase. Replacement parts are warranted for the remainder of the original warranty period.

For non-warranty repairs, contact Pragotrade's Customer Service at 1-800-814-4895 M-F 8am-5pm EST (outside of the United States 440-638-3131) to obtain a Return Authorization Number (RMA Number). Pragotrade will refuse all returns that do not contain this number. **DO NOT RETURN THE UNIT WITHOUT PROPER AUTHORIZATION FROM PRAGOTRADE LLC.**

LIMITATIONS: The warranty is void if the product is used for any purpose other than that for which it is designed. The product must not have been previously altered, repaired, or serviced by anyone else other than Pragotrade LLC. If applicable, the serial number must not have been altered or removed. The product must not have been subjected to accident in transit or while in the customer's possession, misused, abused, or operated contrary to the instructions contained in the instruction manual. This includes failure caused by neglect of reasonable and necessary maintenance, improper line voltage and acts of nature. This warranty is not transferable and applies only to U.S. and Canadian sales.

Except to the extent prohibited by applicable law, no other warranties whether expressed or implied, including warranty merchantability and fitness for a particular purpose, shall apply to this product. Under no circumstances shall Pragotrade LLC be liable for consequential damages sustained in connection with said product and Pragotrade LLC neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than such as is expressly set forth herein. Any applicable implied warranties are also limited to the one (1) year period of the limited warranty.

This warranty covers only the product and its specific parts, not the food or other products processed in it.
CUT ALONG THE DOTTED LINE AND SEND THE WARRANTY CARD ALONG WITH A COPY OF YOUR ORIGINAL PURCHASE RECEIPT TO:

Pragotrade LLC
20365 Progress Drive, Strongsville, OH 44149

WARRANTY CARD
SEND THIS CARD ALONG WITH A COPY OF YOUR ORIGINAL PURCHASE RECEIPT

Customer Name: _____

Address: _____

City/State/Zip: _____

Telephone Number: (_____) _____

E-Mail Address: _____

Original Date of Purchase: ____/____/____


Product Model #: _____

Serial # (if applicable): _____


ATTACHING THE HOPPER/WALL MOUNT

ATTACHING THE HOPPER TO THE APPLE & FRUIT CRUSHER* IN THE WALL MOUNT POSITION:


1. Remove both sets of nuts, washers and carriage bolts securing the mounting board to the top feet on the Apple & Fruit Crusher. *FIGURE 7*

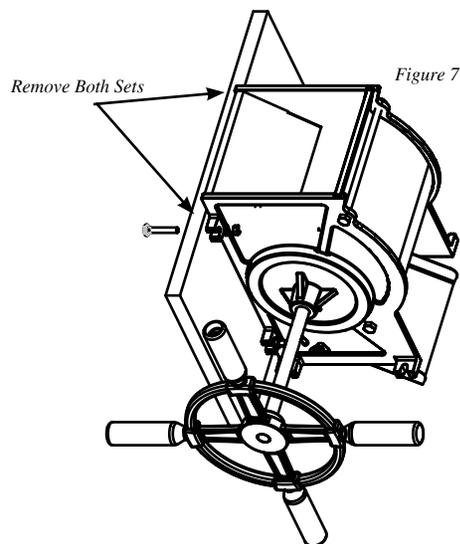

2. Set the assembled Hopper on top of the Apple & Fruit Crusher. *FIGURE 8*

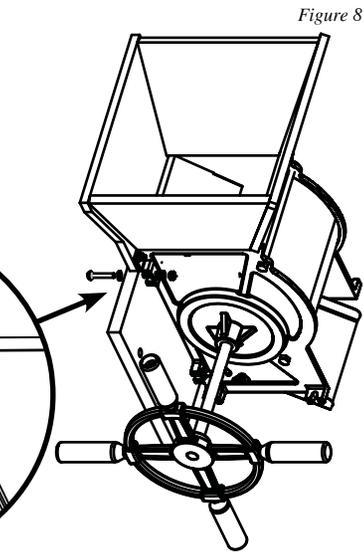

3. Attach the **Left Mounting Bracket** to the top foot on the Apple & Fruit Crusher with the **1½" Machine Screw, two Flat Washers & Hex Locking Nut (G)**. *FIGURE 9*

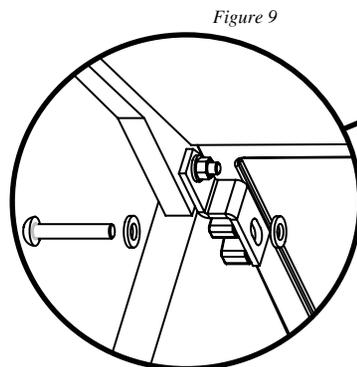

4. Attach the **Right Mounting Bracket** to the top foot on the Apple & Fruit Crusher with the **1½" Machine Screw, two Flat Washers & Hex Locking Nut (G)**.

*Apple & Fruit Crusher Sold Separately.

CAUTION! **NEVER reach into the Chute or Main Body.** Failure to do so, may cause personal injury.

GENERAL SAFETY RULES

WARNING!

READ AND FULLY UNDERSTAND ALL INSTRUCTIONS AND WARNINGS PRIOR TO USING THIS UNIT. YOUR SAFETY IS MOST IMPORTANT! FAILURE TO COMPLY WITH PROCEDURES AND SAFE GUARDS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE. **REMEMBER: YOUR PERSONAL SAFETY IS YOUR RESPONSIBILITY!**

1. **NEVER** use fingers to scrape food away from the crushing drum. Severe injury may result.

2. **KEEP** fingers and hands clear of the crushing drum and stainless steel blades at all times. **NEVER** reach into the chute or main body. Failure to keep fingers and hands out of main body may result in personal injury.

3. Tie back loose hair and clothing, and roll up long sleeves before operating the crusher. Remove ties, rings, watches, bracelets, or other jewelry before operating the crusher.

4. **DO NOT** use the Hopper while under the influence of drugs, medications, or alcohol.

6. **BE SURE** the Hopper is correctly mounted, stable and secure before starting to crush apples or fruit.

7. **KEEP** children away from the unit. Never leave the crusher unattended.

8. Check for damaged or missing parts before using the Hopper. Ensure all parts are operating properly and perform the intended function. If any parts are damaged or missing, please contact Customer Service.

9. The manufacturer declines any responsibility in case of improper use of this product.

11. This product is not intended for commercial use. Commercial use will void the warranty.

SAVE THESE INSTRUCTIONS!

Refer to them often and use them to instruct others.

CAUTION! **NEVER reach into the Chute or Main Body.** Failure to do so, may cause personal injury.

ADDITIONAL ACCESSORIES AVAILABLE


Apple & Fruit Crusher	05-0201
Fruit & Wine Press	05-0101

These products and many more products can be ordered by visiting www.westonsupply.com or by calling Pragotrade LLC Toll Free at 1-800-814-4895
Monday thru Friday 8:00am-5:00pm EST.
Outside the U.S. call 440-638-3131

ASSEMBLY INSTRUCTIONS


1. Align the pilot holes on the **Left Side Board (B)** with the through holes on the **Back Board (A)**.

2. Affix the **Left Side Board (B)** to the **Back Board (A)** with 3 **Wood Screws (H)**. *FIGURE 1*

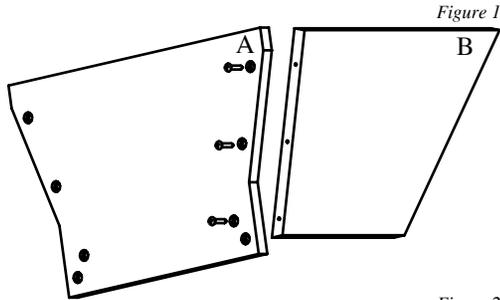


3. Align the pilot holes on the **Right Side Board (C)** with the through holes on the **Back Board (A)**.

4. Affix the **Right Side Board (C)** to the **Back Board (A)** with three **Wood Screws (H)**. *FIGURE 2*

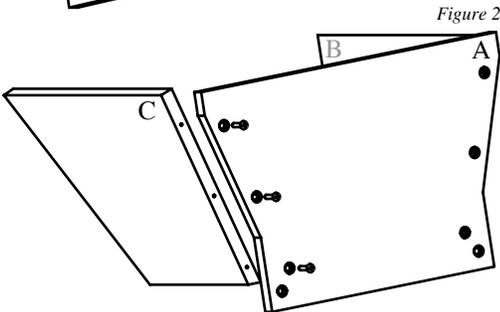


5. Align the pilot holes on the **Left Side Board (B)** with the through holes on the **Front Board (D)**.

6. Affix the **Left Side Board (B)** to the **Front Board (D)** with three **Wood Screws (H)**. *FIGURE 3*

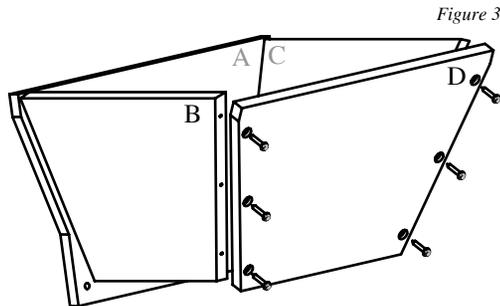

7. Align the pilot holes on the **Right Side Board (C)** with the through holes on the **Front Board (D)**.

8. Affix the **Right Side Board (C)** to the **Front Board (D)** with three **Wood Screws (H)**. *FIGURE 3*

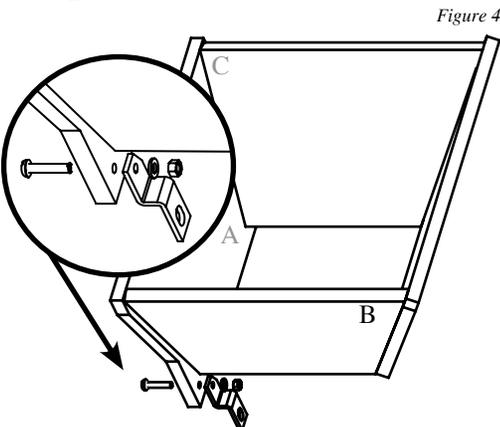

9. Attach the **Left Mounting Bracket (E)** to the **Back Board (A)** with the **1" Machine Screw, Washer and Hex Locking Nut (F)**. *FIGURE 4*

10. Attach the **Right Mounting Bracket (E)** to the **Back Board (A)** with the **1" Machine Screw, Washer and Hex Locking Nut (F)**.


ATTACHING THE HOPPER/TABLE MOUNT

TO ATTACH THE HOPPER TO THE APPLE & FRUIT CRUSHER* IN THE TABLE MOUNT POSITION:

1. Set the assembled **Hopper** on top of the **Apple & Fruit Crusher***. *FIGURE 5*

2. Attach the **Left Mounting Bracket** to the top foot on the **Apple & Fruit Crusher** with the **1½" Machine Screw, two Flat Washers & Hex Locking Nut (G)**. *FIGURE 6*

3. Attach the **Right Mounting Bracket** to the top foot on the **Apple & Fruit Crusher** with the **1½" Machine Screw, two Flat Washers & Hex Locking Nut (G)**.

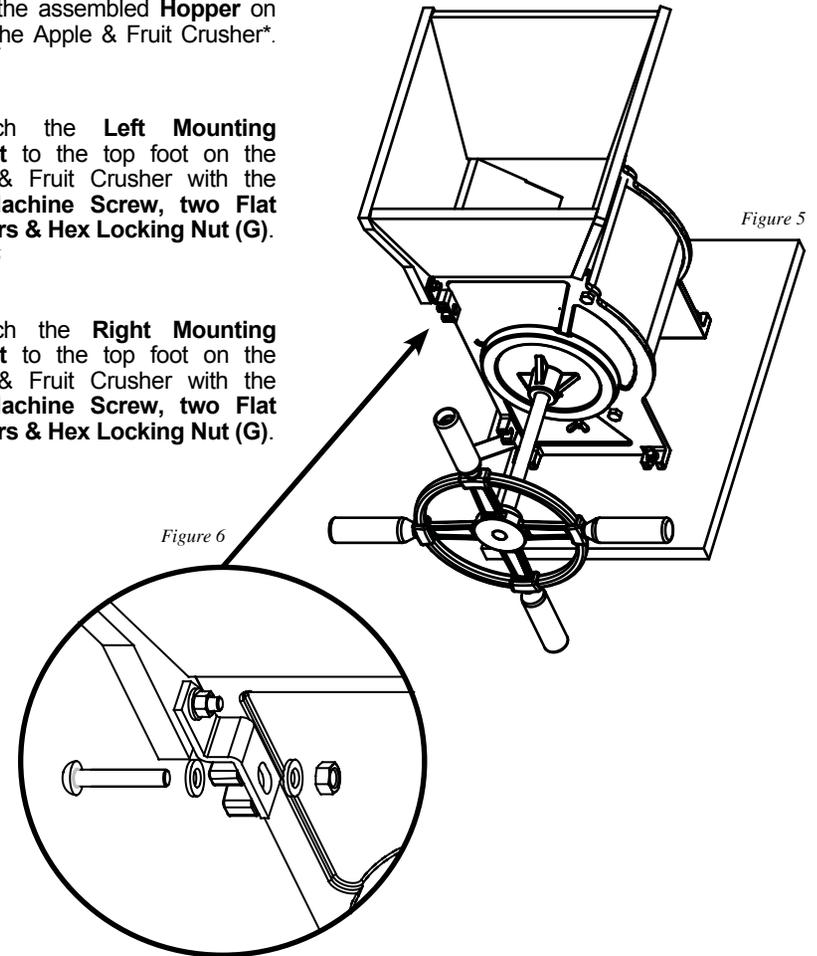

**Apple & Fruit Crusher Sold Separately.*

CAUTION! **NEVER reach into the Chute or Main Body.**
Failure to do so, may cause personal injury.